

---

## 120W spot beam

2 mensajes

---

1:

### 120W small steel gun manual

1. Working voltage: AC220V/50Hz
2. Product power: 150W
3. Lamp beads parameters: 100 W white light
4. Control method: international general DMX512, 12 channels
5. Working mode: DMX512, master/slave, self-propelled, voice control
6. Dimming mode: 0~100% super smooth dimming
7. Strobe: 25 times/sec

### Menu manual

---

Addr	A001--A512 address code
CHnd	12CH channel selection
SLnd	Operation mode selection (DMX self-propelled voice control)
Pan	YES, NO Motor X forward and reverse settings
Tilt	YES, NO Motor Y forward and reverse settings
SEne	Voice control sensitivity adjustment (0-100)
LED	ON, OFF screen always on setting
DISP	YES, NO display forward and reverse settings
TEMP	XXX display temperature
Ver	V100 software version number
Faet	YES, NO restore factory settings

Fine-tuning menu

Press the menu button for 5S and hold it down to bring up the fine-tuning menu (not recommended to adjust at will)

Pan 0-127 -1-127 Forward and reverse fine adjustment  
 Tilt 0-127 -1-127 Forward and reverse fine adjustment  
 Color 0-127 -1-127 Forward and reverse fine adjustment  
 Gobo 0-127 -1-127 Forward and reverse fine adjustment

e

12 channels	Features	DMX value	description		
1	X axis	0-255			
2	X-axis fine adjustment	0-255			
3	Y axis	0-255			
4	Y-axis fine adjustment	0-255			
5	X Y axis speed	0-255	Speed from fast to slow		
6	Pattern white light	0-255	Pattern dimming from dark to bright		
7	Pattern strobe	0	No function		
		1-255	Synchronous strobe speed from slow to fast (1HZ~25HZ)		
		0--15	White light		
		16--31	Color 1		
		32--47	Color 2		
		48--63	Color 3		
		64--79	Color 4		
		80--95	Color 5		
		96--111	Color 6		
		112--127	Color 7		
		8	Color wheel	128-191	Clockwise color automatically switches from fast to slow
192-255	Automatically switch colors counterclockwise from slow to fast				
0-7	White light				
8--15	Pattern 1				
16-23	Pattern 2				
24-31	Pattern 3				
32-39	Pattern 4				
40-47	Pattern 5				
48-55	Pattern 6				
56-63	Pattern 7				
9	Pattern plate			64-73	Pattern 7 jitter from slow to fast
		74-82	Pattern 6 jitter from slow to fast		
		83-91	Pattern 5 jitter from slow to fast		
		92-100	Pattern 4 jitter from slow to fast		
		101-109	Pattern 3 jitter from slow to fast		
		110-118	Pattern 2 jitter from slow to fast		
		119-127	Pattern 1 jitter from slow to fast		
		128-191	Clockwise color automatically switches from fast to slow		
		192-255	Automatically switch colors counterclockwise from slow to fast		
		10	Prism	0-7	Turn off the prism
				8-127	Turn on the prism
128-255	Prism rotation from slow to fast				
11	Macro function	0-49	Channel 1 to channel 10 are valid		
		50-200	Self-propelled		

---

201-255	Light body sound control
0-240	No function
241-255	The lamp body is reset and valid for 5s.

---

If it is detected that the temperature control is not installed or short-circuited, it will be protected and run with a low brightness and display ERR.

In DMX mode, there is no DMX signal, the first digital tube will flash, and the middle position of the last digital tube will flash after the screen saver.

In the display temperature menu (ERR) means no installation or short circuit)

---