

Display MENU Instruction:

Display	Display	DMX 512 Address Setting
Addr	Addr	A001—a512
Chnd	Chnd	12 Channel
SLnd	SLnd	Fast speed mode, Sound, Slow
Pan	PAn	Pan Forward rotation
tiL	tiL	Tilt Forward rotation
Sene	Sene	Forward display
LED	LED	Reverse display
rEST	rEST	DISP
LoAd	LoAd	TEMP
Ver	Ver	Temperature display
Faet	Faet	NO,YES RESET

DMX Channel & Function

12 Channel mode:

Channel	Function	Introduction
1	Pan Running	0-255
2	Pan Fine	0-255
3	Tilt Running	0-255
4	Tilt Fine	0-255
5	Motor speed	0-255 Pan/Tilt running speed
6	Dimming	0-255 Dimmer dark to bright
7	Strobe	0-255 Strobe slow to fast
8	Color	
	Choose color	0-127 8 colors selection
9	Change color automatically	128-255 Speed from slow to fast
	Gobo	
10	Choose gobo	0-127 8 gobos selection
	Change gobo automatically	128-255 Speed from slow to fast
11	8 facet Prism rotating	0-99 Prism close
	Prism open	100-127 Color & gobo with 8 facet prism effect
12	Prism rotating	128-255 Prism rotating, from slow to fast
	Auto Mode	
	Function of Other Channel	0-50
	Auto Mode	51-100
	Sound Mode	101-255
	Reset	250-255