

# RGBWAU LED Par Light

**DMX MODE**

**6 Channels Mode**

Channel	Function	Instruction
CH1	R Dimmer	Red Dimmer- Dark to Bright
CH2	G Dimmer	Green Dimmer- Dark to Bright
CH3	B Dimmer	Blue Dimmer- Dark to Bright
CH4	W Dimmer	White Dimmer- Dark to Bright
CH5	A Dimmer	Amber- Dark to Bright
CH6	U Dimmer	Ultraviolet- Dark to Bright

**10 Channels Mode**

Channel	Function	Instruction
CH1	Total Dimmer	RGBW Total Dimmer- Dark to Bright
CH2	R Dimmer	Red Dimmer- Dark to Bright
CH3	G Dimmer	Green Dimmer- Dark to Bright
CH4	B Dimmer	Blue Dimmer- Dark to Bright
CH5	W Dimmer	White Dimmer- Dark to Bright
CH6	A Dimmer	Amber- Dark to Bright
CH7	U Dimmer	Ultraviolet- Dark to Bright
CH8	Total Strobe	RGBW Total Flash Strobe- Slow to Fast
CH9	Function Choice	000~050: CH1-CH8 Control. 051~100: Different Colors output 101~150: Colors Jump Change. 151~200: Colors Gradate. 201~250: Colors Pulse Change. 251~255: Sound-Active
CH10	Function/Speed	Slow to Fast (At the Colors output and sound choose the color)

## KEYS INSTRUCTION



## DIGITAL SHOW FUNCTION FORM

No	Show	Function	Value	Instruction
1	<b>d001</b>	DMX address	001~512	6CH mode,UP,DOWN increase or reduce the value,
2	<b>A001</b>	DMX address	001~512	10CH mode UP,DOWN increase or reduce the value
3	<b>r255</b>	Red dim	000~255	UP,DOWN Change brightness
4	<b>G255</b>	Green dim	000~255	UP,DOWN Change brightness
5	<b>b255</b>	Blue dim	000~255	UP,DOWN Change brightness
6	<b>u255</b>	White dim	000~255	UP,DOWN Change brightness
7	<b>y255</b>	Amber dim	000~255	UP,DOWN Change brightness
8	<b>P255</b>	Ultraviolet dim	000~255	UP,DOWN Change brightness
9	<b>FH99</b>	Strobe	01 ~ 99	UP,DOWN change the speed
10	<b>CL01</b>	Colors choose	01 ~ 08	UP,DOWN Change color
11	<b>CC99</b>	Colors Jump	01 ~ 99	UP,DOWN change the speed
12	<b>DE99</b>	Colors Gradate	01 ~ 99	UP,DOWN change the speed
13	<b>CP99</b>	Colors Pulse	01 ~ 99	UP,DOWN change the speed
14	<b>SU01</b>	Colors sound-Active	01~09	UP、DOWN Change the effects